







2852M Series Custom Kiosks

- Art files can be supplied through file sharing services, disc or e-mail (25MB max. attachment size)
- For art files supplied through FTP sites, credentials and file locations must be provided.
- All art must be submitted as a native vector file, with any necessary links for raster images.
- Raster images must be sized to fit the art layout, with a resolution of 300PPI.
- Acceptable formats: Adobe Illustrator 10 and up.
- PDF format is only acceptable if originated from vector art, with Illustrator editing capabilities retained.
- All fonts must be outlined.
- All art must maintain a minimum line thickness of .020"

	.010"	Not Acceptable
	.020"	Acceptable
	.025"	Acceptable
	.030"	Acceptable
	.040"	Acceptable
	.050"	Acceptable



- ® and TM need to be a minimum of 3/32" high in order to print properly.

Actual Size: ® TM


- Trademark symbols will not be taken into account for art positioning on finished parts.
- Silk screen printing is only available in spot colors, no half tones.
- PMS tones must be specified for spot colors. Color matching charges may apply.
- 4cp printing is available for art that includes half tones, color gradients, and raster images. This art must be submitted in CMYK format.
- Additional charges will apply for art manipulation to meet the requirements listed above.

Art Boundaries for Printed Panels

2852M Series Custom Kiosk

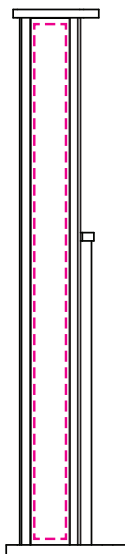
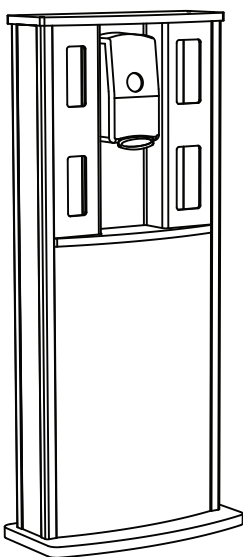


Side Panel
Printable Area*
3.5" W x 47.5" H

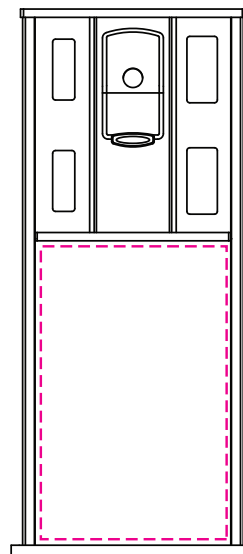


Front Panel
Printable Area*
16" W x 25.25" H

Series 900 Deluxe Kiosk

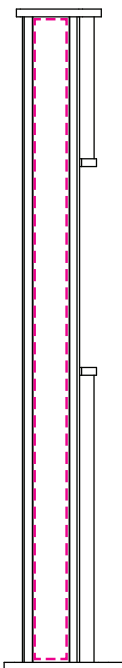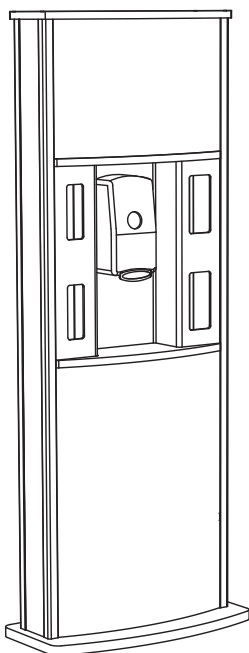

Side Panel
Printable Area*
3.5" W x 62" H

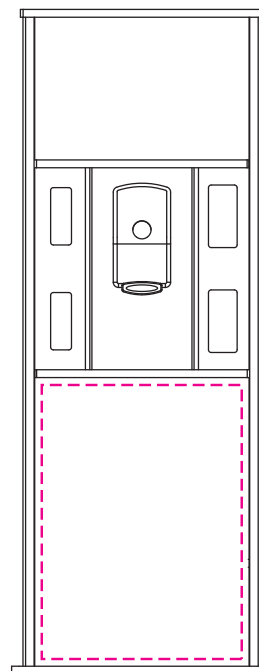

Front Panel
Printable Area*
19" W x 25.25" H

* Art is subject to review. Please contact us for clarification on any of these requirements.